


*Please read these instructions throughout before installing as incorrect fitting will invalidate the guarantee.  
If you are unsure about these instructions please contact Kudos Shower Products 01539 564040*

### IMPORTANT

Check appearance of all product - any defects must be reported to Kudos Shower Products before assembly/installation. Claims for imperfections will only be accepted prior to assembly/installation.

Suitable for both 8mm & 10mm glass thickness.

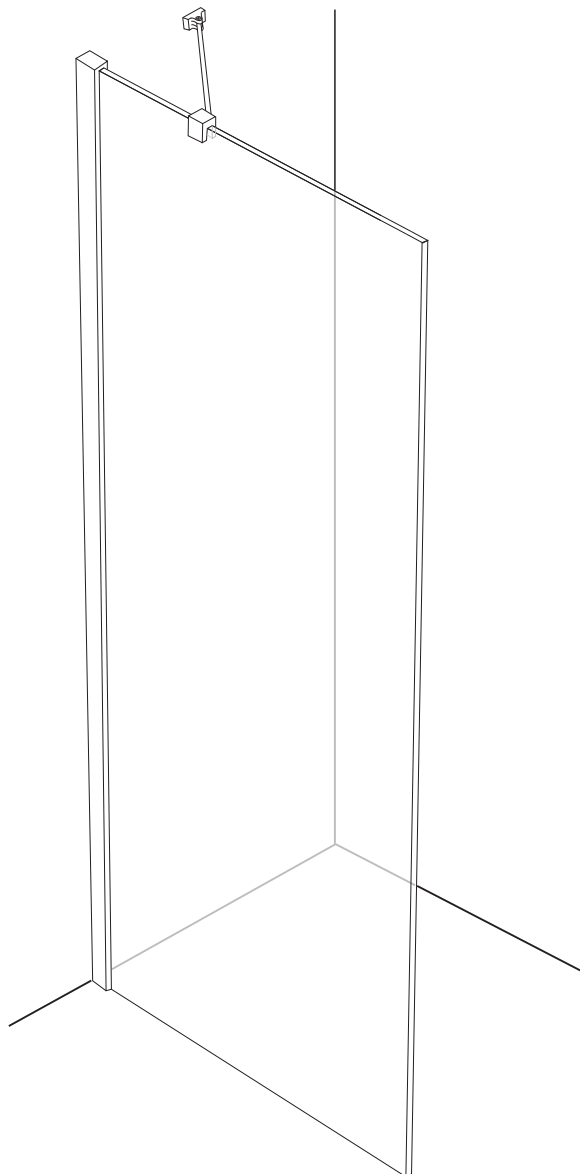

### PACK CONTENTS

3mm Allen Key  
Rawlplug

8x30 CSK Screw  
Stabiliser bar

- 1 Fit glass clamp of stabiliser arm to top of glass panel (remove thin inner gasket if fitting to 10mm glass)
- 2 Position so that arm comes away from the glass at approx. 45 degrees and wall bracket makes contact with the wall, ensure rail is horizontal and mark position of wall bracket.
- 3 Remove stabiliser arm then remove screw to release the wall bracket, position to marks on wall and mark through counter sunk hole.
- 4 Using 6mm drill bit, drill hole and fit rawlplug supplied. Fix wall bracket using screw supplied.
- 5 Position glass clamp back onto glass and secure arm to wall bracket using the screw that was removed earlier.
- 6 Holding glass clamp in position, remove screw and move arm to allow access to allen key grub screw, tighten using 3mm Allan key supplied and re-attach arm with screw.

### CLEANING - general

Use only warm soapy water and damp cloth/ sponge on a regular basis.  
Do not use abrasive scouring powders, chemicals or aerosol cleaners - these may result in damage to the surfaces, in particular, the plated component parts.

**THESE INSTRUCTIONS ARE TO BE LEFT  
WITH THE CONSUMER**